



# 1040CR

---

## User Manual

## INDEX

Preface	3
Your product	4
Description	4
Accessories	7
Before use	7
Intended use	7
General safety instruction	7
Symbols on the wheelchair	8
First use and storage	9
Using your wheelchair	9
Parking brakes (only for 22"/24" wheels)	9
Drum brakes (only for 16" fixed wheels)	10
Moving to/from wheelchair	11
Comfort adjustments	11
Riding	14
Maintenance	18
Points of maintenance	18
Instructions of maintenance	19
Troubleshooting	19
Expected lifespan	20
End of use	20
Warranty and services	23

## Preface

Congratulations! You are now owner of a Midmark wheelchair!

This wheelchair is made by qualified and committed personnel. It is designed and produced according to high quality standards guarded by Midmark.

Thank you for your trust in the products of Midmark. To support you on the use of this wheelchair and its operating options, this manual is offered. Please read it carefully; it will help you to get familiar with the operation, capabilities and limitations of your wheelchair.

If you still have questions after reading this manual, do not hesitate to contact your specialist dealer. He/she will be glad to help you.

### **Important note**

To ensure your safety and to prolong the lifetime of your product, please take good care of it and have it checked and/serviced on a regular basis.

The warranty on this product is based on normal use and maintenance as described in this manual. Damage to your product caused by improper use or lack of maintenance will cause the warranty to lapse.

This manual reflects the latest product developments. Midmark has the right to implement changes to this type of product without any obligation to adapt or replace similar products previously delivered.

Pictures of the product are used to clarify the instructions in this manual. Details of the depicted product may deviate from your product.

### *Information available*

On our website [www.midmark.in](http://www.midmark.in) you will always find the most recent version of the information in this manual. Please consult this website regularly for possible updates.

Visually impaired people can download the electronic version of this manual and have it read out by means of a text-to-speech software application.



User manual

For user and specialist dealer



Installation manual

For specialist dealer



Service manual for wheelchairs


For specialist dealer

## Description

This 1040CR wheelchair is easy to operate and can be used indoors as well as outdoors. It is foldable which makes it very compact to store. The wheelchair is available in multiple sizes and is easily expandable with optional parts to enhance user's comfort.

The following picture shows all parts that are relevant to the user. In the operation and maintenance section, these parts are described if applicable.

Before using your wheelchair, check the technical details and limits of intended use, see chapter 5.

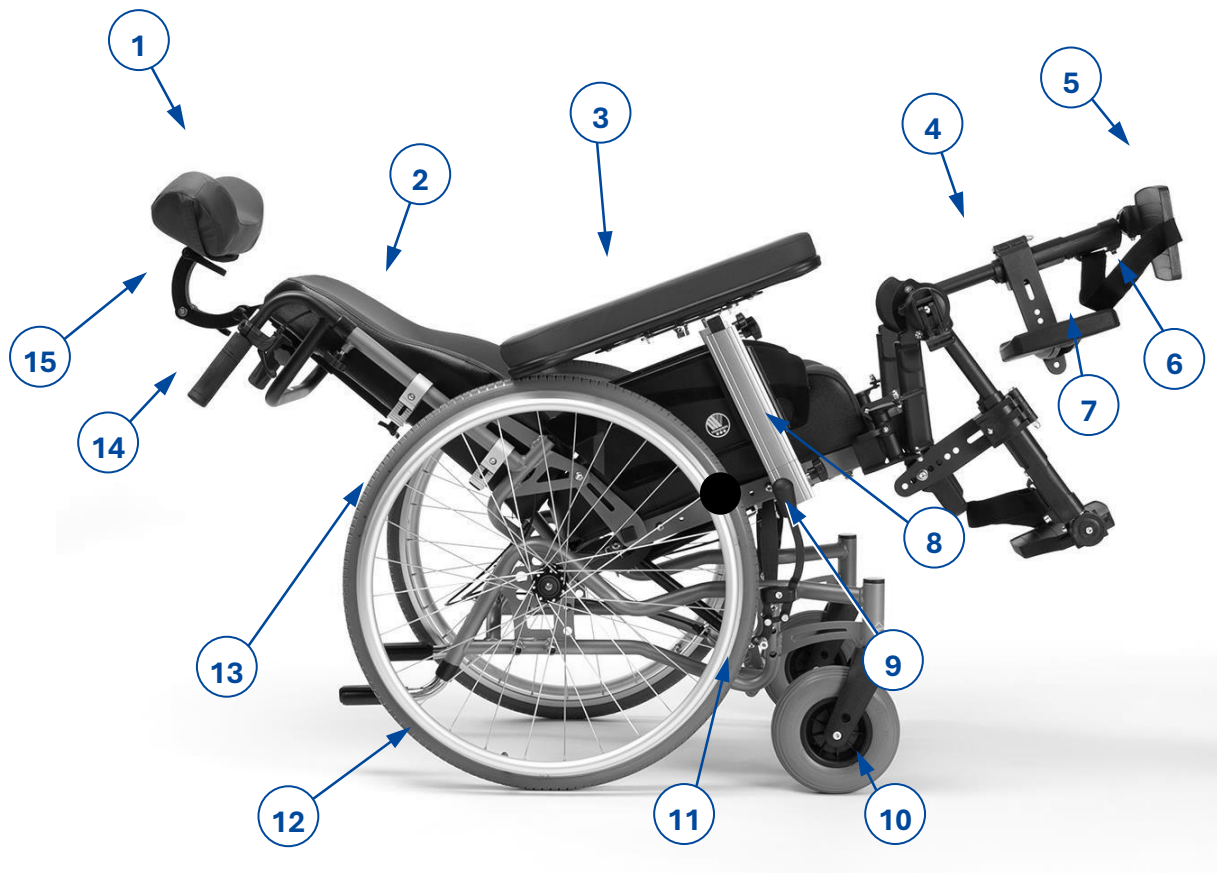

### Important parts

1. Headrest (optional)
2. Backrest
3. Arm pad
4. Leg rest (2x)
5. Footplate (2x)
12. Rear wheel (2x)
13. Hand rim (2x)
14. Push handle with handgrip (2x)
15. Headrest support (optional)



**Figure 2 Important parts, continued**

## Accessories

Following accessories are available for the 1040CR:

- Headrest (L55, L58)

## BEFORE USE

### Intended use

In this paragraph a brief description of the intended use of your wheelchair is given. Additionally, relevant warnings are added to the instructions in the other paragraphs. In this way we would like to make you aware of the possible misuse that may appear.

- This wheelchair is suitable for indoor and outdoor use.
- This wheelchair is designed and produced solely to transport one (1) person with a maximum weight, according to the configuration of the technical specifications in § 5. It is not designed to transport goods or objects, nor for any other use as previously described.
- Depending on the type of wheels on your wheelchair, it can be operated by an attendant or by the user sitting in the wheelchair. You should NOT use this wheelchair without attendant if you suffer from physical or mental impairments that may put you, or other people, in danger when riding the wheelchair. For this reason, consult your doctor first and make sure that your specialist dealer is informed about his advice.
- Only use accessories and spare parts approved by Midmark.
- Please read all technical details and limits of your wheelchair in § 5.
- The warranty of this product is based on normal use and maintenance as described in this manual. Damage to your product caused by improper use or lack of maintenance will cause the warranty to lapse.

### General safety instructions

 CAUTION Risk of injuries and/or damage

Please read and follow the instructions in this manual. Otherwise, you may get injured, or your wheelchair may get damaged.

Keep the following general warnings in mind during use:

- Do not use your wheelchair if you are under influence of alcohol, medicines or other substances that may influence your riding abilities. This also counts for your attendant operating the wheelchair.







- Be aware that some parts of your wheelchair may get very hot or cold due to ambient temperature, solar radiation or heating devices. Be careful when touching. Wear protective clothing if the weather is cold. When going outdoors, riding gloves can be used to improve the grip on the hand rims.
- Take note of the instructions for care and service. The manufacturer is not liable for damage caused by improper servicing / care.

Be aware that your wheelchair may interfere with some types of anti-theft systems, depending on the settings used. This may cause the shop's alarm to go off.

In case a serious incident has occurred involving your product, notify Midmark or your specialist dealer as well as the competent authority in your country.

### Symbols on the wheelchair

The symbols in following list are applicable to your wheelchair. Symbols can be found in the relevant ISO standard (ISO 7000, ISO 7001 and IEC 417).

	Maximum weight of the user in kg
	Outdoor/indoor use (battery and power adapter excluded)
	For indoor use only (battery and power adapter)
	Maximum safe slope in ° (degrees).
	Not intended to be used as seat in a motor vehicle
	Type designation




## First use and storage

 CAUTION Risk of battery damage


- Make sure that your wheelchair is stored dry to prevent mould to grow and damage the upholstery.
- Check the technical details for storage, see chapter 5.

## USING YOUR WHEELCHAIR

 WARNING Risk of injuries

- First read the previous chapters and inform yourself about the intended use. Do NOT use your **wheelchair** unless you have read and fully understood all instructions.
- In case of doubts or questions, do not hesitate to contact your local specialist dealer, your care provider or technical adviser to help you.

### Parking brakes (only for 22"/24" wheels)

 CAUTION Risk of injuries

- Only operate the brake lever when your wheelchair is stopped.
- An attendant should operate the brake lever if you have impaired mobility.
- Make sure the wheelchair is on a flat horizontal surface before releasing the brakes.
- Never release both brakes simultaneously.
- Brakes may only be adjusted by your specialist dealer.

 CAUTION Risk of damage

- Do not use the parking brakes to slow the wheelchair down during movement.

Your wheelchair is equipped with two manually operated parking brakes. These brakes are intended to prevent movement of the wheelchair when parked.

Releasing brakes [A]:

1. With one hand, hold one hand rim tight (or your attendant holds the push bar with one hand).
2. Pull the brake lever (10) of the OTHER wheel to the REAR.
3. Repeat this for the second wheel and parking brake.

Applying brakes [B]:

1. With one hand, hold one hand rim tight (or your attendant holds the push bar with one hand).
2. Push the brake lever (10) of the OTHER wheel to the FRONT until you feel a distinctive lock.
3. Repeat this for the second wheel and parking brake.

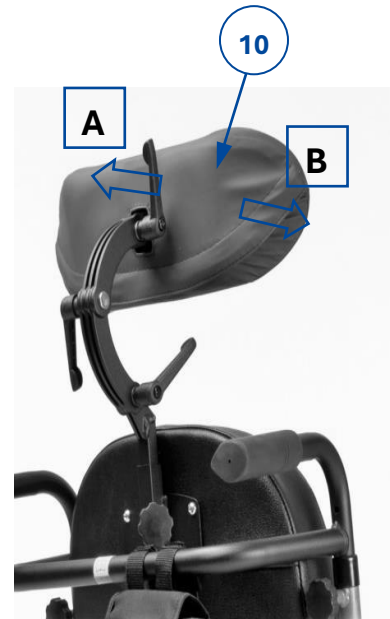



Figure 6 Operating parking brakes

### Drum brakes (only for 16" fixed wheels)

 CAUTION Risk of injuries

- Make sure that the wheelchair is on a flat horizontal surface before releasing the brakes.
- Never release both brakes simultaneously.
- To park or stop on a slope, use the parking brakes after coming to a halt.
- Brakes may only be adjusted by your specialist dealer.

To operate the drum brakes:

1. Pull the brake levers (60) in a squeeze motion.
2. Each brake lever (60) can be blocked by pushing the lock lever (61) down with your finger.
3. Release the brake levers (60).



To move/ride again:

- Pull the brake levers (60) in a squeeze motion. The lock lever (61) is release by this movement.  
Hold the handgrips firmly, while releasing the brake levers (60).

Figure 7 Operating drum brakes

## Moving to/from wheelchair

 CAUTION Risk of injuries or damage

- In case you cannot perform the transfer in a safe manner, ask someone to assist you.
- Do not stand on the footplates during transfer into or out of the chair.

### Transfer

1. Position the wheelchair as close as possible to you when sitting in your chair, couch, seat or bed.
2. Apply both parking brakes to block the movement, see §3.1.
3. Move the backrest and seat to sitting position, see §3.4.1.
4. Fold the footplates upwards to prevent standing on them, or turn the leg rests aside to free the passage for transfer.
5. If necessary, remove the armrest and/or leg rest on one side (see §3.4).
6. Transfer to/from the wheelchair using the strength of your arms, or with the help of an attendant or lifting equipment.



### Sitting in the wheelchair

1. Sit down on the seat with your lower back against the backrest.
2. Reinstall the armrest and/or leg rest, if removed.
3. Turn the leg rests back to the front, fold down the footplates and put your feet on the footplates.
4. Make sure that your upper legs are horizontal and that your feet are in a comfortable position; adjust the wheelchair according to the instructions in § 3.4.

## Comfort adjustments

 CAUTION Risk of injuries or damage

- The following comfort adjustments can be made by an attendant or caretaker. All other adjustments are done by your specialist dealer.
- Always keep the swing range of the footrest in mind to prevent bystanders from being injured or objects from being damaged.
- Make sure that your fingers, clothes, buckles won't get trapped during adjustment.

## Backrest and seat inclination

 CAUTION Risk of injuries or damage

- Be aware that the stability decreases when the wheelchair is moved from sitting upright to inclined position.
- Apply the parking brakes before adjusting the backrest and seat inclination.

The seat inclination and backrest inclination can be adjusted simultaneously or separately by an attendant. Make sure that the patient sits in the chair when the attendant adjusts the backrest inclination and that the wheelchair does not tip over.

Seat inclination:



1. Squeeze the lever (1) on the left handle (see label) towards the handle to adjust the seat inclination.
2. Pull/Push the seat in the desired position (0° to + 21°), the gas pressure spring shall be pressed in/out.
3. Loosen the lever (1) to block the gas pressure spring.

Backrest inclination:




the angle of the backrest.

spring shall be pressed in/out.

1.Squeeze the lever (1) on the right handle (see label) towards the handle to adjust

2.Pull/Push the backrest in the desired position (0° to + 54°), the gas pressure

3.Loosen the lever (1) to block the gas pressure spring.

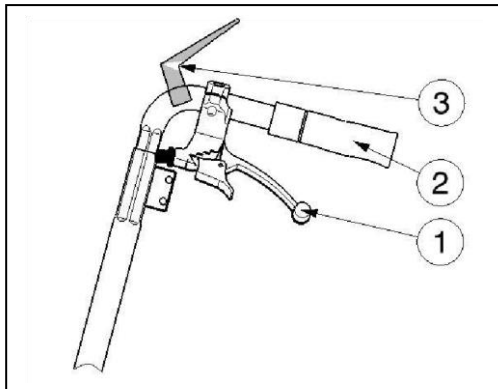

If your wheelchair features drum brakes, the levers (1) are used as brakes; additional levers (3) have been mounted to adjust the backrest and seat inclination.

**Armrest height**

The arm pads (3) of the wheelchair can be adjusted in 6 different height positions:

1. Turn the star knob (45) anticlockwise to unlock.
2. Pull and hold the star knob to release the inner tube of the armrest (9).
3. Slide the inner tube of the armrest (9) up/down in the support (46) until the desired height. Make sure that the holes on the inner/outer tube align.
4. Retighten the star knob (45) by turning it clockwise.
5. Repeat this for the second armrest. Make sure that the armrests is firmly secured.

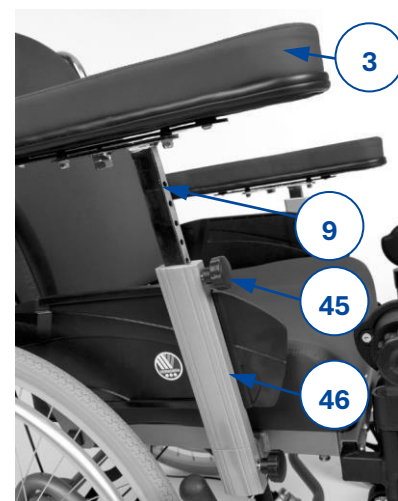



Figure 8 Adjusting armrest height

## Push handles / push bar height



 CAUTION Risk of injuries

Always use the available adjustment holes on the push handle. Never exceed the maximum height adjustment.

The push handles (16) and push bar (23) are connected and can be adjusted in 7 different height positions:

1. Loosen both star knobs (31) on the handle supports and remove them.
2. Adjust the height of both push handles simultaneously by sliding them up/down in the supports. Make sure that the holes on the inner/outer tube align.
3. Insert the two star knobs (31) in the supports and the adjustment holes.
4. Turn the star knobs clockwise until they are finger-tight.
5. Make sure that the push handles are firmly secured.

Figure 9 Adjusting push-handle height

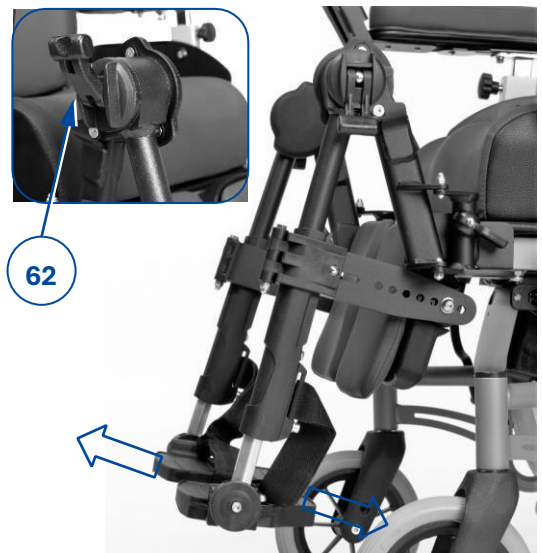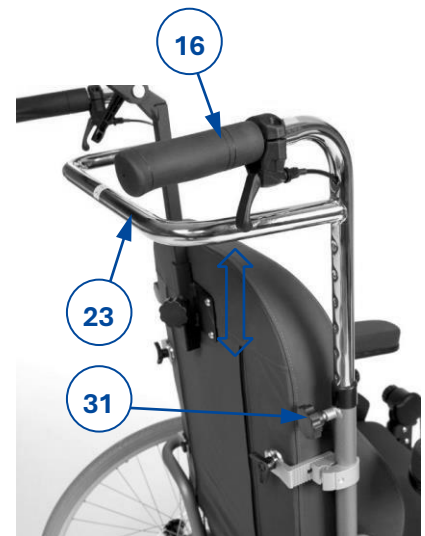

## Leg rest angle (BZ7-BZ8)


1. Loosen the lever (62) at the rotation point.
2. Adjust the angle of the leg rest by lifting/lowering the footplates (between 100° - 190°).
3. Retighten the lever (62) firmly by hand.
4. Repeat this for the second leg rest. Make sure that both leg rests are firmly secured.

Figure 10 Adjusting footrest angle

## Tip cap height

1. Press and hold the spring button (63).
2. Slide the tip cap tube (64) in/out of the frame tube.
3. Release the spring button.
4. Repeat this for the second tip cap. Make sure that both tip caps are firmly secured.

Figure 11 Adjusting tip cap height

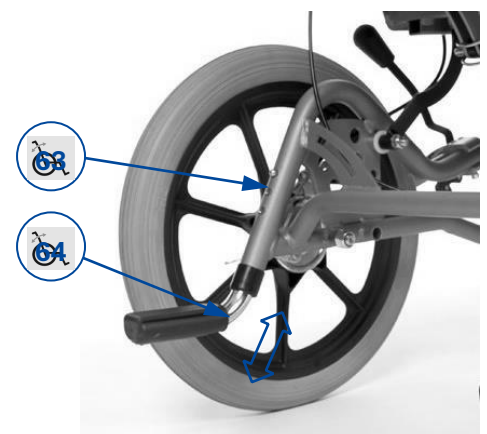

## Riding

Depending on your medical condition and type of wheelchair, you can ride the wheelchair yourself or have it pushed by an attendant.



CAUTION

Risk of entrapment

- Prevent your fingers from getting your hands trapped being caught by the wheel spokes. On the hand rims when riding through small passages.
- When driving with an attendant, keep your arms away from the wheels and keep your feet on the footplates.



CAUTION

Risk of injuries and damage

- Do NOT drive on slopes, obstacles, steps or kerbs larger than the size described in the technical specifications in chapter 5.
- Do not proceed with your wheelchair in traffic. Always stay on the pavement.
- Do not operate the hand rims with wet hands.
- Pay attention if the road has holes or gaps that may cause entrapment of the wheels.
- Avoid stones and other objects that may block the wheels.
- Always keep the swing range of the footrest in mind to prevent bystanders from being injured or objects from being damaged.
- Before every usage, make sure that:
  - all adjustments are firmly secured, see §3.4.
  - the parking brakes are working properly.
  - the tires are in good condition, see §4.


## Riding with an attendant

1. Release the brakes or have them released by the attendant, while he/she is holding the wheelchair to prevent movement, see §3.1 or §3.2.
2. The attendant grasps the handgrips or push bar to push the wheelchair in the desired direction.
3. After stopping, apply the brakes while holding the wheelchair in place, see §3.1 or §3.2.


## Riding on your own

1. Release the parking brakes one by one, see §3.1.
2. Move your hands to the highest position on both hand rims.
3. Lean forward and push/turn the hand rims forward until your arms are straight.
4. Swing your arms loosely back to the topside of the hand rims and repeat the push movement.
5. To stop: wait until the wheelchair stops and move forward/backward by operating the hand rims. Apply the parking brakes one by one, see §3.1.

## Riding on slopes

 CAUTION Risk of injuries


- If the attendant has too little strength to control the wheelchair, stop riding and use the brakes immediately.
- When you stop on a (small) slope, use your brakes, since the wheelchair may start moving unexpectedly.

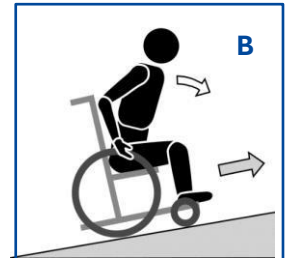

1. Secure yourself in the wheelchair with a safety belt.
2. Ask an attendant or a bystander to help you.
3. Drive slowly and in a straight line. Lean slightly forward (A/B) when going up the slope. Lean backwards, against the backrest, when going down the slope.
4. Never reverse on a slope.

Figure 12 Going up a slope

## Using ramps

 CAUTION Risk of injuries caused by tipping over

- Only use ramps approved by Midmark and do not exceed their maximum load.
  - Make sure that the wheelchair does not touch the ground or ramp due to the inclination of the wheelchair.
  - Only negotiate ramps with the help of one or two attendants.
1. Adjust the position of backrest, seat and footrest to decrease the volume taken by the wheelchair and to increase the stability during inclination.
  2. Remove the footrests, see §2.4.5.
  3. Follow the instructions in §3.5.3.

## Using stairs

 CAUTION Risk of injuries caused by tipping over

- Stairs should always be negotiated with the help of two attendants.
  - Never try to use stairs that are not appropriate for wheelchairs. To use the stairs while sitting in your wheelchair, the following instructions should be followed:
1. Remove the footrests, see §2.4.5.



2. One attendant tip the wheelchair slightly backwards by the handles.
3. The second attendant grabs the wheelchair at the front of the frame, on both sides of the wheelchair.
4. Stay calm, avoid sudden movements and keep your arms inside the wheelchair.
5. Both attendants lift and pull the wheelchair from step to step while the rear wheels roll over the steps.
6. After using the stairs, mount the footrests back in place, see §2.4.4.



Figure 13 Using stairs

### Coping with obstacles

 **CAUTION** Risk of injuries caused by tipping over

- Always ask assistance of one or two attendant (s).
- Make sure that the footplates won't touch ground while taking an obstacle. If necessary, remove the footrests.
- Do not use your wheelchair on an escalator.
- If available, wear your safety belt.

#### Small kerbs (up or down)

These can be taken forward (E / F) with one attendant:

1. The attendant moves the wheelchair forward approaching the kerb. Make sure the footplates won't touch the kerbs.
2. Lean backwards to reduce the pressure on the front wheels.
3. The attendant holds the handles firmly while moving forward. If necessary he uses the tip cap to keep the front wheels lifted until they have passed the kerb rim.
4. The attendant releases the pressure on the handles and tip cap to gently put the front wheels on the ground.
5. Next, he holds the handles firmly while pushing the wheelchair with the rear wheels up/down the kerb.



Figure 14 Negotiating small kerbs with one attendant

#### Medium kerbs (up or down)

These should be taken backwards with one attendant:

1. The attendant reverses the wheelchair so that rear wheels approach the kerb first (G / H).
2. Going down: Lean forward (G) to move your centre of gravity to the front. Going up: Lean backward (H) to move your centre of gravity to the back.
3. The attendant pulls the wheelchair gently from/on the kerb.



Figure 15 Negotiating medium kerbs with one attendant



### *Higher kerbs*

Higher kerbs, but below maximum size, see §5, should be taken with help of two attendants.

#### Going down:

1. Remove the footrests.
2. The attendant moves the wheelchair forward approaching the kerb.
3. Lean backwards to reduce the pressure on the front wheels.
4. The attendant holds the handles firmly and uses the tip cap to keep the front wheels lifted till they have passed the kerb rim.
5. The second attendant grabs the front of the frame and moves backwards while pulling the rear wheels down the kerb.
6. The first attendant releases the pressure on the handles and tip cap to put the front wheels on the ground. Going up:
  1. Remove the footrests.
  2. The first attendant reverses the wheelchair so that rear wheels approach the kerb first.
  3. Lean backward to move your centre of gravity to the back.
  4. The second attendant grabs the front of the frame and moves forward while pulling/pushing the rear wheels on the kerb. The first attendant lifts and holds the handles firmly to prevent the wheelchair from tipping over.

## Maintenance

Your wheelchair requires minimum maintenance, but it is advisable to inspect the wheelchair regularly in order to drive trouble-free for years.

### Points of maintenance

 CAUTION Risk of injuries and damage

Repairs and replacements may only be undertaken by trained persons and only genuine replacement parts of Midmark should be used.

The last page of this manual contains a registration form for the specialist dealer to record each service.

The service frequency depends on the frequency and intensity of use. Contact your dealer to agree to a common timetable for inspection/maintenance/repair.

#### *Before each use*

Inspect the following points:

- All parts: Present and undamaged or unworn.
- All parts: Clean, see § 4.2.2.
- Wheels, seat, leg rests, arm rests, footrests, footplates and headrest (if applicable): Well secured.
- Condition of wheels/tyres, see § 4.2.1.
- Condition of brakes, see § 4.2.1.
- Condition of frame: No deformation, instability, weakness or loose connections
- Seat, backrest, arm pads, leg pads and head rest (if applied): No excessive wear (like dented spots, damage or tears).

Contact your specialist dealer for possible repairs or part replacements.

#### *Yearly or more often*

Have your wheelchair inspected and serviced by your specialist dealer, at least once a year, or more often. The minimum maintenance frequency depends on use and should therefore be commonly agreed on with your specialist dealer.

#### *If stored*

Make sure that your wheelchair is stored dry to prevent mould from growing and the upholstery from being damaged.


## Instructions of maintenance

### Wheels and tyres

Proper working of the brakes depends on the state of the tyres, that can change due to wear and contamination (water, oil, mud, ...).

- Keep your wheels free of wires, hair, sand and carpet fibres.
- Check the profile of the tyres. If the tread depth is less than 1 mm, the tyres need to be replaced. Contact your specialist dealer for this matter.

### Cleaning



Risk of damage by moisture

- Never use a hose or high-pressure cleaner to clean the wheelchair.

Wipe all rigid parts of the wheelchair with a damp cloth (not drenched). If necessary, use a mild soap, suitable for varnishes and synthetics.

The upholstery can be cleaned with lukewarm water and a mild soap. Do not use abrasive cleaning agents to clean.

### Disinfection




CAUTION

Risk of damage

Disinfections may only be undertaken by trained persons. Consult your specialist dealer.

### Troubleshooting

Even if you use your wheelchair properly, a technical problem may occur. In this case, contact your local specialist dealer.



WARNING

Risk of injuries and damage to the wheelchair

- NEVER attempt to repair your wheelchair yourself.

The following symptoms may indicate a serious problem. Therefore, always contact your specialist dealer if you spot any of the following deviations:

- Strange sound.
- Uneven tread wear on one of the tyres.
- Jerky movements.
- Wheelchair deflects to one side.

- Damaged or broken wheel assemblies.

**Expected lifespan**

The average lifespan of your wheelchair is 5 years. Depending on the frequency of use, driving circumstances and maintenance, the lifespan of your wheelchair will increase or decrease.

**End of use**

At end of life, you need to dispose your wheelchair according to the local environmental legislation. The best way to do so, is to disassemble the wheelchair to facilitate the transport of recyclable parts.

## Technical specification

The technical details below are only valid for this wheelchair, at standard settings and optimal

Ambient conditions. Take these details into account during use.

The values are no longer applicable if your wheelchair has been modified, damaged or suffers from severe wear.

Table 2: Technical specifications

<b>Brand</b>	<b>Midmark</b>
<b>Type</b>	Wheelchair
<b>Model</b>	<b>1040CR</b>

<b>Description</b>	<b>Dimensions for all configurations</b>
Max. weight of user	<b>135 kg</b>
Static stability downhill	10° **
Static stability uphill	15° **
Static stability sideways	12° **
Obstacle climbing	60 mm
Overall length with footrests (depends on seat-depth adjustment)	1050 - 1090 mm
Dismantled length without footrests (depends on seat depth adjustment)	830 - 870 mm
Effective seat width	450 mm
Overall width (depends on the seat width)	680 mm
Dismantled width (without armrest)	600 mm
Total height (without headrest)	990 - 1060 mm
Dismantled height (with folded backrest, without armrests)	710 - 780 mm
Seat plane angle	0° - +21°
Effective seat depth	460 - 520 mm
Seat surface height at front edge (with cushion)	460 - 530 mm
Backrest angle	0° - +54°

Backrest height	550 - 585 mm
Distance between footrest and seat	400 - 570 mm *
Angle foot plate	80° - 100°
Angle between seat and footrest	104° - 194°
Distance between armrest and seat	220 - 320 mm
Front location of armrest structure	460 - 490 mm

<b>Description</b>	<b>Dimensions per configuration</b>
Diameter Rear wheels	16" (T30) with drum brakes
Hand rim diameter	NA
Footplate width (minimum – maximum)	44-46 mm
Diameter steering wheels	200 mm
Horizontal location of axle (deflection)	-8 mm - 41 mm
Total mass	44,3 kg
Mass of heaviest part	32,5 kg
Masses of removable parts	
Footrests	4,90 kg
Armrests	3,45 kg
Rear wheels	NA
Backrest	3,45 kg
Turning radius (diameter)	1520 mm
Strength tests according to	ISO 7176-8
Ignitability of upholstery according to	ISO 7176-16
Use and storage temperature	+ 5 °C ~ + 45°C
Storage and use humidity	30% ~ 70%
<p>We reserve the right to introduce technical changes. Measurement tolerance <math>\pm 15</math> mm /1,5 kg / 1,5°.</p> <p>(*) Do not adjust the footrest in maximum length to prevent the footplate from touching the ground. (**) Tested in standard configuration</p> <p>NA Not applicable</p>	

## WARRANTY & SERVICE

Every effort has been made to ensure that the information in this user manual is valid. Midmark India Pvt. Ltd. reserves the right to change the information in this document without prior notice. Midmark India Pvt. Ltd. warrants, solely to the end users of this product that for a period specified in the warranty certificate, such product shall perform as per its intended use. The foregoing warranties shall not apply if the Product has been subjected to: (a) physical abuse, misuse, abnormal use, or use not consistent with Midmark India Pvt. Ltd.'s published directions, (b) any modification by anyone other than Midmark India Pvt. Ltd. or third parties designated by Midmark India Pvt. Ltd.; or (c) fraud, tampering, negligence, or accidents, depending upon the nature of the products.

**Limitation of Liability:** In no event shall Midmark India Pvt. Ltd. be liable or obligated to the end user in any manner for any special, non-compensatory, consequential, indirect, incidental, statutory or punitive damages of any kind, including, without limitation, for injury or loss of life, lost profits, lost sales, lost revenue, loss of any software or data, or loss of use of any hardware, software or data, regardless of the form of action, whether in contract, tort, negligence, strict product liability, or otherwise, even if Midmark India Pvt. Ltd. has been informed of or is aware of the possibility of any such damages in advance. Midmark India Pvt. Ltd.'s total aggregate liability under this agreement and in relation to anything which Midmark India Pvt. Ltd. has done or not done in connection with this agreement shall be limited to the price of the products purchased and paid for by the end user during the period in which such liability arises. The limitations set forth above shall be deemed to apply to the maximum extent permitted by applicable law and notwithstanding the failure of the essential purpose of any limited remedies.

To maintain functional safety and the right to claim under the warranty only original replacement parts may be used. For ordering replacement parts, customer service requests and further questions, please contact our technical support department.

## Disclaimer

Every effort has been made to ensure that the information in this user manual is valid. Midmark India Pvt. Ltd. reserves the right to change the information in this document without prior notice.

**MANUFACTURER'S ADDRESS****Corporate Office:**

Midmark India Pvt. Ltd.

Art Guild House, "B" Wing, FOF, 4<sup>th</sup>, Phoenix Market City, B-16, Lal Bahadur Shastri Marg, Kurla West, Kurla, Mumbai, Maharashtra 400070

Tel.: +9122 2491 53000

**Registered Office:**

Janak House, opp. IOC Depot, Shaikh Misry Road, Wadala (E),  
Mumbai – 400037, India

[Tel:+9122 2413 0407](tel:+912224130407)

Toll Free No.: 1800 22 8020 | Email: [technicalsupport@midmark.com](mailto:technicalsupport@midmark.com)

**MIDMARK INDIA PVT. LTD.**

---

Art Guild House, "B" Wing, FOF, 4<sup>th</sup>, Phoenix Market City, B-16, Lal Bahadur Shastri Marg, Kurla West, Kurla, Mumbai, Maharashtra 400070 | Toll Free: 1800 22 8020 | Tel: +91 22 4915 3000 | [www.midmark.in](http://www.midmark.in) | [india@midmark.com](mailto:india@midmark.com)